

Clarte[®]

Home Comfort Center

INSTRUCTION MANUAL GAS STOVES

MODEL : GIB3827, GBG3834, GIB3839

GIB3827




GBG3834



GIB3839



 CE CB



SES
SMART ELECTRICAL SUPPLIES

SMART ELECTRICAL SUPPLIES CO.,LTD.

52,54,56,58,60 Sol Phrayasuren (Sol Saengsri), Phrayasuren Rd.,
Bangchan, Klongsamwa, Bangkok 10510

Tel. (66)2-919-2311 Fax : (66)2-919-2400

E-mail: info@clartethailand.com

**Thank you for purchasing "Clarte" Gas Stove
Please read this instruction manual carefully
before using the product and follow the
safety guidelines.**

สารบัญ

SUGGESTION.....	1
FEATURES OF BURNER.....	1-2
PARTS IDENTIFICATION.....	3
RECOMMENDATIONS FOR PRESSURE REGULATOR VALVE AT GAS TANK.....	4
INSTALLATION PROCEDURES.....	5
OPERATING THE IGNITION.....	6
TIPS FOR SAFETY USING GAS BURNERS.....	7
TROUBLESHOOTINGS.....	8
RECOMMENDATIONS FOR ADJUSTING FLAME.(FOR BRASS BURNERS ONLY.).....	9

Note:

Some details of the products in this manual may differ from the actual products which may be caused by the mistake in printing this instruction manual. The Company reserves the right to update or modify any part of actual products which may be considered appropriate. Please contact our customer service for more information.

SUGGESTION

1. Size requirement of cooking vessel : The diameter less than 28 centimeters.
2. Do not heat (turn on the gas stove) the empty cooking vessel.
3. The gas stove is intended for home use only, no commercial use.
4. Company will not be responsible for damage caused by misuse or improper use of the gas stove.

FEATURES OF BURNER

BRASS BURNER

1. Brass burners gas stove with auto ignition.
2. Brass burner easy to clean, long life and no rust.
3. The gas stove is one band but the heat equivalent of two bands (inner and outer).
4. The top is tempered glass with thickness 8 mm. and the inside is stainless steel.
5. Tempered glass is heat resistance, non-conductive thermal and easy to clean.
6. All burners operate freely.
7. Adjust the heat as needed to suit the utensil or cooking style.

FEATURES OF BURNER

INFRARED GAS STOVE

1. The structure of stove body is extra thick and easy to clean, just use a moistened cloth to wipe and remove dust.
2. The special ceramic burners provide heat up to 1,000 degrees celcius. Just turn on the burners for 5 minutes, they will burn up all dirt on the burners with out any flame or smoke and won't blacken the utensils.
3. The extra thick, non-rust and heat exchange aluminium burner rings provide completely combust the gas they use which results in low production of such poisons as carbon monoxide.
4. The automatic spark ignition system equipped with adjustable flameless and wind resistant by using the ON/OFF knob. It comes with to 15 cm. diameter burners.
5. The expose of heating system spreads directly on the stove and causes a 30% or more gas saving.

PARTS IDENTIFICATION.



GIB3827

1. Tempered glass top
2. Utensil's stand
3. Brass burners
4. Infrared burner
5. ON/OFF Knob
6. Frame body



GBG3834

1. Tempered glass top
2. Utensil's stand
3. Brass burners
4. ON/OFF Knob
5. Frame body



GIB3839

1. Tempered glass top
2. Utensil's stand
3. Brass burners
4. Infrared burner
5. ON/OFF Knob
6. Frame body

For first time use, Utensil stands are to be removed from underneath the gas stove for assemble.

RECOMMENDATIONS FOR PRESSURE REGULATOR VALVE AT GAS TANK.

✓ The valve must be as follow:-

- Pressure regulator valve at gas tank must be low pressure gas type only
(See pictures below).



Automatic types of low pressure regulator valves.



Non automatic types of low pressure regulator valves.

- ✗ - Do not risk to use the high pressure regulator valves. These high pressure regulator valves are to be used with non automatic ignition gas stoves only
(See pictures below).



High pressure regulator valves.



CAUTION!

 
Do not use with High pressure regulator gas valve.

Use with Low pressure regulator gas valve only.





INSTALLATION PROCEDURES

1. Check the condition of gas stove, all the pipe connections and gas tank whether they are in good condition or not.
2. Check the ignition if it is ready to work.
3. Connect rubber hose to the rear of burners gas pipe (use only synthetic rubber hose which to be used with gas only).

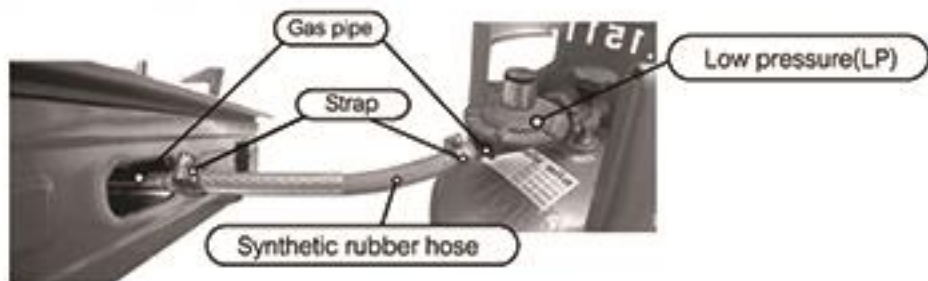

  4. Locate the gas stove in a room with windows or good ventilation.
5. Keep distance between the side of gas stove at least 15 cm. from wall, 25 cm. from the back and 150 cm. from the ceiling.

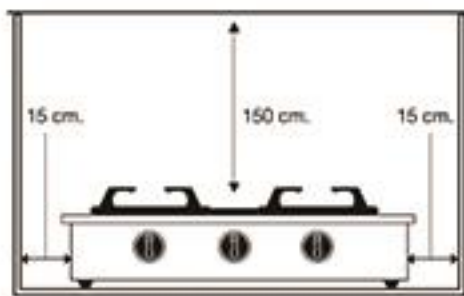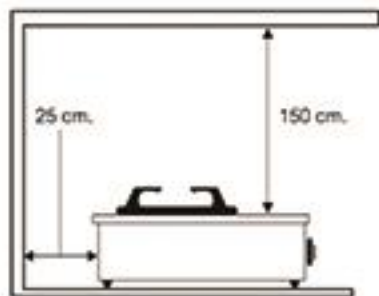

CAUTIONS!

 
1. Do not locate the gas stove close to inflammable objects nore windy place.
2. Rubber hose at the rear of burners must be hose which to be used for gas system only, and do not fold or bend the hose.

OPERATING THE IGNITION


1. Check the knob if it is always at "OFF" position.




2. Turn on valve at the head of gas tank.

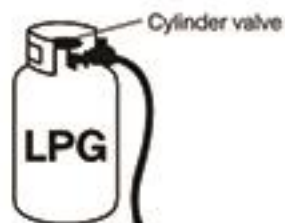

 
3. Press and turn the spark ignition anticlockwise and leave it for 3-5 seconds to drive out air inside the gas tube, the flame will be set up with automatic flame setting system in position "ON"

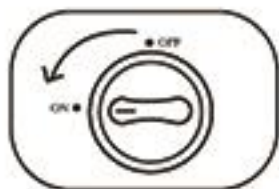

 4. To turn down flame, turn the knob to low flame position.

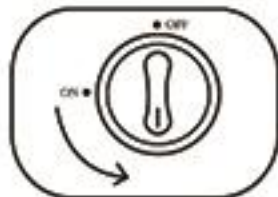

 5. Turn the knob to "OFF" position after use and also close the valve at gas tank.

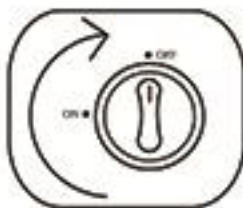

TIPS FOR SAFETY USING GAS BURNERS

1. Locate the burners at a well-ventilated area but not too windy as strong wind might put out the flame and thus unknowingly wasting the leaking gas.
Do not place gas tank in wet or damp area as it will cause rust to develop at its bottom.
2. Always turn off gas valve and burner switch after use to release the remaining pressure in the gas hose.
3. Check leakage regularly by soaking gas hose and all joints in soap water, if bubbles develop, immediately turn off the gas valve and urgently inform gas supplier.
4. In case of gas leakage, immediately open door and windows for ventilation to help dilute gas spreading in the air, and do not light up flame or turn ON/OFF the electrical switch that will cause sparks.

CAUTION! Do not use with adjustable high pressure gas valve.
Use with adjustable low pressure gas valve only.

ข้อแนะนำ

1. ขนาดหม้อ หรือภาชนะควรมีเส้นผ่านศูนย์กลางไม่เกิน 28 ซม.
2. ไม่ควรเปิดการทำงานของเตาแก๊ส หากหม้อหรือภาชนะ บนเตาแก๊สว่างเปล่า หรือไม่มีอาหาร
3. เตาแก๊สนี้ไม่เหมาะกับการใช้งานในเชิงพาณิชย์
4. หากไม่ปฏิบัติตามคู่มือนี้ บริษัทฯ ขอสงวนสิทธิ์ในการรับประกันสินค้า

คุณสมบัติของหัวเตาแก๊ส

เตาแก๊สหัวอินฟราเรด

1. โครงสร้างของเตาแก๊สมีความหนาเป็นพิเศษ หน้าแผ่นกระจกกว้าง สำหรับการทำความสะอาดเพราะสิ่งสกปรกจะไม่เกาะติดแน่น เพียงใช้ผ้าชุบน้ำหมาดๆ มาเช็ดคราบสกปรกก็จะหลุดออกโดยง่าย
2. แผ่นเซรามิกหัวเตาให้ความร้อนได้ 1,000 องศาเซลเซียส หัวเตาแก๊สอินฟราเรดทำความสะอาดได้โดย เปิดไฟเตาเพียง 5 นาที สิ่งสกปรกต่างๆ ที่อยู่บนแผ่นเซรามิกก็จะถูกเผาไหม้จนสิ้น ไม่มีเปลวไฟ ไร้เขม่าดำ
3. วงแหวนครอบหัวเตา ที่มีความหนาเป็นพิเศษไม่เป็นสนิมซึ่งระบายความร้อนได้เป็นอย่างดี เเผาไหม้ได้อย่างสมบูรณ์เต็มที่ ทำให้ไม่ได้รับอันตรายจากก๊าซพิษคาร์บอนมอนอกไซด์ที่หลงเหลืออยู่
4. ระบบหัวจุดไฟอัตโนมัติ และสามารถปรับไฟได้ โดยใช้ปุ่มเปิด-เปิดปรับระดับตามต้องการ สามารถต้านลมแรงได้ หัวเตาเส้นผ่านศูนย์กลาง 15 เซนติเมตร
5. เป็นระบบแผ่ความร้อนขึ้นบนตัวเตาโดยตรง จึงให้ความร้อนสูง และประหยัดแก๊สได้มากกว่าเตาแก๊สทั่วไปประมาณ 30%

Recommendation for adjusting flame. (For brass burners only)

The flame adjusters are located under the burners. You have to turn them till the flame become light-blue/green. If the flame is red, it will cause utensils to be blacken.



Note : Incomplete combustion might cause

1. For Brass burner : Red or yellow flame would cause bottom of the utensil to be blacken, and use it momentary.

Solution

- 1.1 Dirtiness and dust.
- 1.2 For model GBG3834, GIB3839 equalize air pressure and gas pressure by adjusting burner damper valve by arrows A.(Picture 1), gas flame will turn blue or green.

2. For infrared stove : Infrared gas stove does not emit visible flame, incomplete combustion might cause visible frame and effect gas consumption efficiency.

Solution

- 2.1 Clean air funnel by using soft brush as shown by arrows A.(Picture 2)



SES

SMART ELECTRICAL SUPPLIES CO.,LTD.

SMART ELECTRICAL SUPPLIES CO.,LTD.

**52,54,56,58,60 Soi Phrayasuren 30 (Soi Saengsri),
Phrayasuren RD., Bangchan, Klongsamwa, Bangkok 10510,**

Thailand.Tel. 02-919-2311 Fax. 02-919-2400

SERVICE CENTERS 02-919-2300

www.clartethailand.com

facebook <http://www.facebook.com/clartethailand>



www.clartethailand.com

SMART ELECTRICAL SUPPLIES CO.,LTD.

52,54,56,58,60 Soi Phrayasuren 30 (Soi Saengsri), Phrayasuren RD., Bangchan, Klongsamwa, Bangkok 10510, Thailand. Tel. (062) 919-2311 Fax. (062) 919-2400

Bang Pa-In

Fashion Island mall

Nopparat Hospital

YESCO
CLUBHOUSE
Market

TOA

Driving school

Phrayasuren Soi 30

New Store
Phrayasuren 30



Ramintra 109

Ramintra Road

makro

Bangna

Siam Park